

WATTGATE 350i / 320i / 320i HC / 350i HC


Wiring Instructions

Warning: To prevent electrocution, turn off power and test to be certain power is off before installing receptacle in wall. Failure to comply with the following instructions could cause an electrical failure or fire.


1. Cable Selection: Select a cable of suitable ampacity, service and temperature rating (see NEC Article 400). The plugs and connectors are designed for use with 3-wire cable with a diameter from .300" to .655" (18/3 SJ through 12/3 S).

2. Device Preparation: Check to see that the rating on the plug or connector is correct for the installation. Remove the body of the device from the housing by loosening the two assembly screws on the face of connector.


If the cord is 14/3 S or 12/3 S, knock out the cord clamp insert from inside the housing. Cords larger than .500" (14/3 S or 12/3 S) Will not fit through the housing unless the cord clamp insert is removed.

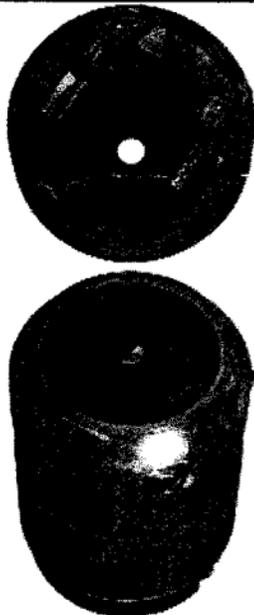

3. Cable Preparation: Select the proper end of the cord for the plug or connector. Feed the cable through the housing and strip the cord as shown. Make sure the wire is clean, and a bright copper color. It may be necessary to cut back the wire until clean wire is uncovered. Do not solder the ends of the wire.

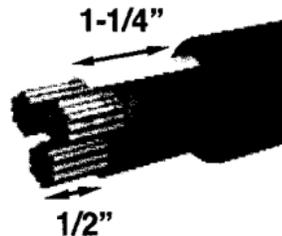

4. Assembly: Insert wires into the proper terminal pockets. The green wire must go into the terminal with the green screw and green colored opening. The white wire must go into the terminal with the silver colored terminal screw and white colored opening (on 125V and 277V devices only). The black wire must go into the terminal with a brass, or black colored screw and black colored opening.

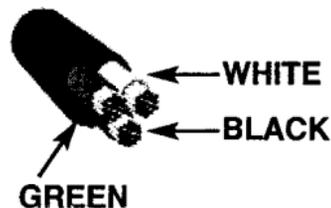

Make certain there is no wire insulation clamped inside any terminal, and there are no stray wire strands outside the terminals. Tighten the terminal screws to 12 in-lbs torque. Do not over tighten.

Slide the housing over the device body. Note that the keyway aligns the two parts. Alternately tighten the cord clamp screws to 8-10 in-lbs torque. Tighten the device assembly screws on the face plate.



WATTGATE ⚡

2752 South 1900 West - Ogden Utah 84401 - phone 801-621-1501 - fax 801-627-6980

www.wattgate.com