


# NEUTRIK® Tiny Plug


## 3.5 mm right-angle stereo plug

### Assembly Instructions


A

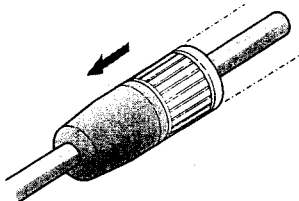


B




C

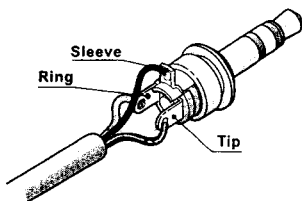

D

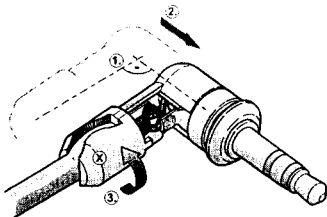

E

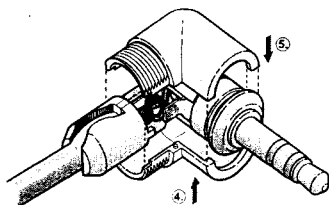

A Slide the boot onto the cable.

B Prepare cable as shown.

C Solder the wire ends .


D Assembly of strain relief:

- ① Bend cable by 90° towards the sleeve contact.
- ② Position the chuck on the connector body.
- ③ Close the strain relief (break away part (X) if cabel O.D. > 3.2 mm)

E Place the shell halves onto the connector body.

F Slide the bushing up to the thread and tighten it.

F

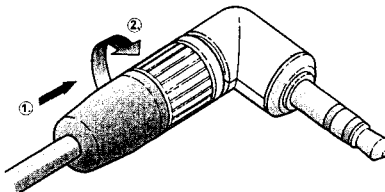

NEUTRIK AG  
Liechtenstein  
Tel.: +423/237 24 24  
Fax: +423/232 53 93  
www.neutrik.com

NEUTRIK Zürich AG  
Switzerland  
Tel.: +41 1736 5010  
Fax: +41 1736 5011

NEUTRIK (UK) Ltd.  
Great Britain  
Tel.: +44 1983/811 441  
Fax: +44 1983/811 439

NEUTRIK USA INC.  
USA  
Tel.: +1 732/901 9488  
Fax: +1 732/901 9608

NEUTRIK Tokyo Ltd.  
Japan  
Tel.: +81 3/3663 4733  
Fax: +81 3/3663 4796

NEUTRIK France  
France  
Tel.: +33 1/4131 6750  
Fax: +33 1/4131 0511

NEUTRIK Vertriebs GmbH  
Germany / Netherlands  
Tel.: +49 8131/28 08 90  
Fax: +49 8131/28 08-30

Draft. Nr.: BDA 128 / 3102M1241  
Update: 02.09.2003



**NEUTRIK®**  
CONNECTING THE WORLD